

# Index

---

## A

**About this manual, 0-5**

**Acknowledgments, 0-2**

**Air cleaner housing, removal and installation, 4-6**

**Air filter element, servicing, 1-13**

**Air intake chamber and intake ducts, removal and installation, 4-7**

VT600 models, 4-7

VT750 models, 4-9

**Alternator, check and replacement, 9-20**

## B

**Battery**

charging, 9-4

conventional batteries, 9-4

maintenance-free batteries, 9-4

electrolyte level/specific gravity, check, 1-6

removal, inspection, maintenance and installation, 9-3

**Brake light switches, check and replacement, 9-9**

**Brake light/taillight assembly, removal and installation, 9-11**

**Brake pads and shoes, wear check, 1-7**

**Brake system, general check, 1-7**

**Brakes, wheels, tires and final drive, 7-1 through 7-22**

brake caliper, removal, overhaul and installation, 7-3

brake disc, inspection, removal and installation, 7-5

brake system bleeding, 7-8

drive chain, removal, cleaning and installation, 7-18

driven flange and rubber dampers, removal, inspection and installation, 7-21

drum brake, removal, inspection and installation, 7-9

front brake master cylinder, removal, overhaul and installation, 7-6

general information, 7-2

hose, inspection and replacement, 7-8

pads, replacement, 7-2

rear brake pedal and linkage, removal and installation, 7-11

sprockets, check and replacement, 7-20

tires, general information, 7-18

wheel bearings, inspection and maintenance, 7-16

wheel, removal and installation

front, 7-14

rear, 7-15

wheels, alignment check, 7-18

wheels, inspection and repair, 7-13

**Buying parts, 0-7**

## C

**Cam chain guide, removal, inspection and installation, 2-23**

**Cam chain tensioner, removal, inspection and installation, 2-18**

**Cam chains and rear cam chain drive sprocket, removal, inspection and installation, 2-36**

**Camshaft, sprocket and rocker arms, removal, inspection and installation, 2-14****Carburetors**

- disassembly, inspection, cleaning and reassembly, 4-14
- overhaul, general information, 4-12
- removal and installation, 4-12

**Chain guard, removal and installation, 8-5****Charging system**

- check, 9-19
- testing, general information and precautions, 9-19

**Clutch**

- cable, replacement, 2-29
- check and adjustment, 1-10
- diode, check and replacement, 9-17
- removal, inspection and installation, 2-30
- switch, check and replacement, 9-16

**Connecting rods and bearings, removal, inspection and installation, 2-45****Coolant reservoir, removal and installation, 3-7****Coolant temperature warning system, check and component replacement, 3-5****Cooling fan and thermostatic fan switch, check and replacement, 3-4****Cooling system, 3-1 through 3-10**

- check, 1-19
- coolant reservoir, removal and installation, 3-7
- coolant temperature warning system, check and component replacement, 3-5
- cooling fan and thermostatic fan switch, check and replacement, 3-4
- draining, flushing and refilling, 1-20
- general information, 3-2
- radiator cap, check, 3-2
- radiator, removal and installation, 3-2
- thermostat housing, removal and installation, 3-7
- thermostat, removal, check and installation, 3-5
- water pump, check, removal and installation, 3-8

**Crankcase**

- components, inspection and servicing, 2-41
- disassembly and reassembly, 2-39
- emission control system, description, check and component replacement, 4-3

**Crankshaft and main bearings, removal, inspection and installation, 2-47****Cylinder compression, check, 1-14****Cylinder head**

- and valves, disassembly, inspection and reassembly, 2-20
- removal and installation, 2-19

**Cylinder head cover, removal and installation, 2-12**

- all models, 2-13
- VT600 models, 2-12
- VT750 models, 2-13

**Cylinder, removal, inspection and installation, 2-23****D****Drive chain**

- and sprockets, check,, 1-11
- removal, cleaning and installation, 7-18

**Driven flange and rubber dampers, removal, inspection and installation, 7-21****Drum brake, removal, inspection and installation, 7-9****E****Electrical system, 9-1 through 9-30**

- alternator, check and replacement, 9-20
- battery
  - charging, 9-4
  - conventional batteries, 9-4
  - maintenance-free batteries, 9-4
  - removal, inspection, maintenance and installation, 9-3
- brake light switches, check and replacement, 9-9
- brake light/taillight assembly, removal and installation, 9-11
- charging system
  - check, 9-19
  - testing, general information and precautions, 9-19
- clutch diode, check and replacement, 9-17
- clutch switch, check and replacement, 9-16
- electrical troubleshooting, 9-2
- fuses, check and replacement, 9-5
- general information, 9-2
- handlebar switches
  - check, 9-13
  - removal and installation, 9-14
- headlight aim, check and adjustment, 9-6
- headlight assembly, removal and installation, 9-6
  - VT600 models, 9-6
  - VT750 models, 9-7
- headlight bulb, replacement, 9-5
- horn, check and replacement, 9-16
- ignition main (key) switch, check and replacement, 9-13
- lighting system, check, 9-5
  - brake light switches, 9-5
  - headlight, 9-5
  - speedometer light and indicator lights, 9-5
  - turn signal lights/brake light/taillight/license plate light, 9-5
- neutral switch, check and replacement, 9-15
- oil pressure switch, check and replacement, 9-15
- sidestand switch, check and replacement, 9-16
- speedometer
  - and cable, removal and installation, 9-12
  - light and indicator lights, replacement, 9-12

starter clutch assembly, removal, inspection and installation, 9-22  
 starter motor  
   disassembly, inspection and reassembly, 9-18  
   removal and installation, 9-17  
 starter relay switch, check and replacement, 9-17  
 turn signal  
   assembly, removal and installation, 9-10  
   circuit and relay, check, 9-8  
   tail/brake light and license plate bulbs, replacement, 9-7  
 voltage regulator/rectifier, check and replacement, 9-22  
 wiring diagrams, 9-23  
**Engine, clutch and transmission, 2-1 through 2-54**  
 cam chain guide, removal, inspection and installation, 2-23  
 cam chain tensioner, removal, inspection and installation, 2-18  
 cam chains and rear cam chain drive sprocket, removal, inspection and installation, 2-36  
 camshaft, sprocket and rocker arms, removal, inspection and installation, 2-14  
 clutch cable, replacement, 2-29  
 clutch, removal, inspection and installation, 2-30  
 connecting rods and bearings, removal, inspection and installation, 2-45  
 crankcase components, inspection and servicing, 2-41  
 crankcase, disassembly and reassembly, 2-39  
 crankshaft and main bearings, removal, inspection and installation, 2-47  
 cylinder head  
   and valves, disassembly, inspection and reassembly, 2-20  
   removal and installation, 2-19  
 cylinder head cover, removal and installation, 2-12  
   all models, 2-13  
   VT600 models, 2-12  
   VT750 models, 2-13  
 cylinder, removal, inspection and installation, 2-23  
 engine disassembly and reassembly, general information, 2-12  
 engine, removal and installation, 2-10  
 gearshift linkage, removal, inspection and installation, 2-36  
 initial start-up after overhaul, 2-53  
 main and connecting rod bearings, general note, 2-44  
 major engine repair, general note, 2-10  
 oil pump drive chain and sprockets, removal, inspection and installation, 2-34  
 oil pump, removal, inspection and installation, 2-41  
 operations possible with the engine in the frame, 2-10  
 operations requiring engine removal, 2-10  
 piston rings, installation, 2-28

piston, removal, inspection and installation, 2-25  
 primary drive gear, removal, inspection and installation, 2-35  
 recommended break-in procedure, 2-53  
 transmission, removal, inspection and installation, 2-49  
 valves/valve seats/valve guides, servicing, 2-20  
**Engine oil/filter, change, 1-12**  
**Evaporative emission control system (California models only), inspection, 1-21**  
**Evaporative emission control system (California models), description, check and component replacement, 4-4**  
**Exhaust system**  
   check, 1-21  
   removal and installation, 4-20

## F

**Fasteners, check, 1-22**  
**Fender(s), removal and installation, 8-6**  
**Fluid levels, check, 1-5**  
**Footpegs, removal and installation, 8-1**  
**Fork oil change, 6-3**  
**Forks**  
   disassembly, inspection and reassembly, 6-4  
   removal and installation, 6-4  
**Frame and bodywork, 8-1 through 8-8**  
   chain guard, removal and installation, 8-5  
   fender(s), removal and installation, 8-6  
   footpegs, removal and installation, 8-1  
   frame, inspection and repair, 8-1  
   general information, 8-1  
   rear grab rails (VT750 models), removal and installation, 8-7  
   rear sub-frame (VT600 models), removal and installation, 8-6  
   seat, removal and installation, 8-2  
   side covers, removal and installation, 8-4  
     VT600 models, 8-4  
     VT750 models, 8-5  
   sidestand  
     maintenance, 8-2  
     removal and installation, 8-2  
   steering head covers, removal and installation, 8-3  
     VT600 models, 8-3  
     VT750 models, 8-4  
**Fuel and exhaust systems, 4-1 through 4-22**  
   air cleaner housing, removal and installation, 4-6  
   air intake chamber and intake ducts, removal and installation, 4-7  
     VT600 models, 4-7  
     VT750 models, 4-9  
   carburetor overhaul, general information, 4-12

carburetors  
 disassembly, inspection, cleaning and reassembly, 4-14  
 removal and installation, 4-12  
 crankcase emission control system, description, check and component replacement, 4-3  
 evaporative emission control system (California models), description, check and component replacement, 4-4  
 exhaust system, removal and installation, 4-20  
 fuel pump system, check and component replacement, 4-9  
 fuel tank  
 cleaning and repair, 4-3  
 removal and installation, 4-2  
 general information, 4-2  
 idle fuel/air mixture, adjustment, 4-20  
 sub-air cleaner element, removal and installation, 4-6  
 throttle cables and grip, removal, installation and adjustment, 4-10  
**Fuel system, check and filter replacement, 1-22**  
**Fuses, check and replacement, 9-5**

## G

**Gearshift linkage, removal, inspection and installation, 2-36**  
**General specifications, 0-8**

## H

**Handlebar, removal and installation, 6-2**  
**Handlebar switches**  
 check, 9-13  
 removal and installation, 9-14  
**Headlight**  
 aim, check and adjustment, 9-6  
 assembly, removal and installation, 9-6  
 VT600 models, 9-6  
 VT750 models, 9-7  
 bulb, replacement, 9-5  
**Horn, check and replacement, 9-16**

## I

**Identification numbers, 0-6**  
**Idle fuel/air mixture, adjustment, 4-20**  
**Idle speed, check and adjustment, 1-18**  
**Ignition main (key) switch, check and replacement, 9-13**  
**Ignition system, 5-1 through 5-6**  
 check, 5-2

coils, check and replacement, 5-2  
 general information, 5-1  
 ignition control module, check and replacement, 5-4  
 pulse generator(s), check and replacement, 5-3  
 timing rotor, removal and installation, 5-4  
 timing, check, 5-5  
**Initial start-up after overhaul, 2-53**  
**Introduction to the Honda VT600 and VT750 Shadow V-Twins, 0-5**  
**Introduction to tune-up and routine maintenance, 1-5**

## L

**Lighting system, check, 9-5**  
 brake light switches, 9-5  
 headlight, 9-5  
 speedometer light and indicator lights, 9-5  
 turn signal lights/brake light/taillight/license plate light, 9-5  
**Lubrication, general, 1-15**

## M

**Main and connecting rod bearings, general note, 2-44**  
**Maintenance techniques, tools and working facilities, 0-10**  
**Motorcycle chemicals and lubricants, 0-18**

## N

**Neutral switch, check and replacement, 9-15**

## O

**Oil pressure switch, check and replacement, 9-15**  
**Oil pump**  
 drive chain and sprockets, removal, inspection and installation, 2-34  
 removal, inspection and installation, 2-41

## P

**Piston**  
 removal, inspection and installation, 2-25  
 rings, installation, 2-28  
**Primary drive gear, removal, inspection and installation, 2-35**

**R****Radiator**

- cap, check, 3-2
- removal and installation, 3-2

**Rear brake pedal height and freeplay, check and adjustment, 1-8****Rear grab rails (VT750 models), removal and installation, 8-7****Rear shock absorbers, removal, inspection and installation**

- VT600 models, 6-11
- VT750 models, 6-12

**Rear sub-frame (VT600 models), removal and installation, 8-6****Recommended break-in procedure, 2-53****Routine maintenance intervals, 1-4****S****Safety first!, 0-16****Seat, removal and installation, 8-2****Side covers, removal and installation, 8-4**

- VT600 models, 8-4
- VT750 models, 8-5

**Sidestand**

- maintenance, 8-2
- removal and installation, 8-2
- switch, check and replacement, 9-16

**Spark plugs, replacement, 1-14****Speedometer**

- and cable, removal and installation, 9-12
- light and indicator lights, replacement, 9-12

**Sprockets, check and replacement, 7-20****Starter clutch assembly, removal, inspection and installation, 9-22****Starter motor**

- disassembly, inspection and reassembly, 9-18
- removal and installation, 9-17

**Starter relay switch, check and replacement, 9-17****Steering and suspension, 6-1 through 6-16**

- fork oil change, 6-3
- forks
  - disassembly, inspection and reassembly, 6-4
  - removal and installation, 6-4
    - VT600 models, 6-4
    - VT750 models, 6-4
- general information, 6-2
- handlebar, removal and installation, 6-2
- rear shock absorbers, removal, inspection and installation
  - VT600 models, 6-11
  - VT750 models, 6-12
- steering stem and bearings, removal, inspection and installation, 6-8

**swingarm bearings**

- check, 6-13
- replacement, 6-15

**swingarm, removal, inspection and installation**

- VT600 models, 6-13
- VT750 models, 6-14

**Steering head**

- bearings, check, adjustment and lubrication, 1-21
- covers
  - removal and installation, 8-3
    - VT600 models, 8-3
    - VT750 models, 8-4

**Sub-air cleaner element, removal and installation, 4-6****Suspension**

- adjustments, 1-23
- check, 1-22

**Swingarm bearings**

- check, 6-13
- replacement, 6-15

**Swingarm, removal, inspection and installation**

- VT600 models, 6-13
- VT750 models, 6-14

**T****Tank, fuel**

- cleaning and repair, 4-3
- removal and installation, 4-2

**Thermostat housing, removal and installation, 3-7****Thermostat, removal, check and installation, 3-5****Throttle cable and choke operation, check and adjustment, 1-9****Throttle cables and grip, removal, installation and adjustment, 4-10****Timing rotor, removal and installation, 5-4****Tires, general information, 7-18****Tires/wheels, general check, 1-9****Tools, 0-10****Transmission, removal, inspection and installation, 2-49****Troubleshooting, 0-19****Tune-up and routine maintenance, 1-1 through 1-24****Turn signal**

- assembly, removal and installation, 9-10
- circuit and relay, check, 9-8
- tail/brake light and license plate bulbs, replacement, 9-7

**V****Valve clearances, check and adjustment, 1-16****Valves/valve seats/valve guides, servicing, 2-20**

**Voltage regulator/rectifier, check and replacement, 9-22**

**W**

**Water pump, check, removal and installation, 3-8**  
**Wheel bearings, inspection and maintenance, 7-16**

**Wheel, removal and installation**  
front, 7-14  
rear, 7-15

**Wheels**  
alignment check, 7-18  
inspection and repair, 7-13

**Wiring diagrams, 9-23**  
**Working facilities, 0-10**